## Smart Construction Pilot Payload UI Change Fix with Arm Height Display Detail of Truck Name



Copyright © EARTHBRAIN Ltd. All Rights Reserved.

### Introduction



- This manual is a guide for payload-related updates in the Pilot app v1.0.11 (UI changes, addition of counting methods, and pop-up display of track information).
- Please refer to the tablet application manual posted on the support site for information on conventional payload functions.



# 01 Chapter

Overview

Copyright © EARTHBRAIN Ltd. All Rights Reserved.

3

#### The UI has been changed to reflect the addition of new functions.

- b. Added function to fix payload value with arm tip height
- c. Pop-up display of dump truck name and excavator name



### **1.1 Overview of Changes**

a. Changed "Load Meter" screen UI





# 02 Chapter

## Details

Copyright © EARTHBRAIN Ltd. All Rights Reserved.

5

### 2.1 UI Change of LoadMeter





No.	表示内容
1	Selected truck
2	Selected truck (detail) (new)
3	Maximum load capacity of selected truck
(4)	Truck load volume displayed in gauge/value
(5)	Construction machine being set (model - type)
6	Construction machine being set (model - type) (detail) (new)
$\bigcirc$	Approximate maximum digging amount of bucket
8	Digging weight displayed in gauge/value
9	Caution display when loading accuracy seems to be poor
10	Loading start/finish button
11)	Pause button
12	Loading result fix button
13	Arm height indicator (new)
14	Height setting button (new)
15	Loading result delete button
16	Loading history for each time
12	Setting

Copyright © EARTHBRAIN Ltd. All Rights Reserved.

### 2.2 Fix with Bucket Height

- 1. Basic Settings > Turn ON "Fix With Bucket Height"
- Operate excavator to the bucket height at which you want to fix payload value.
- Tap the height setting button on the load meter screen
  → The height indicator is set to 0 m (green bar is the current height)
- 4. Payload value will be counted when the gauge passes the set height.



Basic Settings





### 2.3 Dump truck/Excavator detail EARTHBRAIN

- 1. Tap ① button next to the dump truck/excavator name on the load meter screen.
- 2. The name of the currently selected dump truck/excavator is displayed in detail



Copyright © EARTHBRAIN Ltd. All Rights Reserved.

### **Contact information**

![](_page_8_Picture_1.jpeg)

#### Inquiries about products and defects:

EARTH BRAIN Co., Ltd. Support site inquiries : Europe US Australia Asia