

Steer Indicator User Manual




【Attention】





This function is available with tablet app version 1.0.06 or later. If you are using an older version, please update the app.

Introduction

This function provides horizontal guidance for selected polylines. To use this function, select a project file that contains linework.

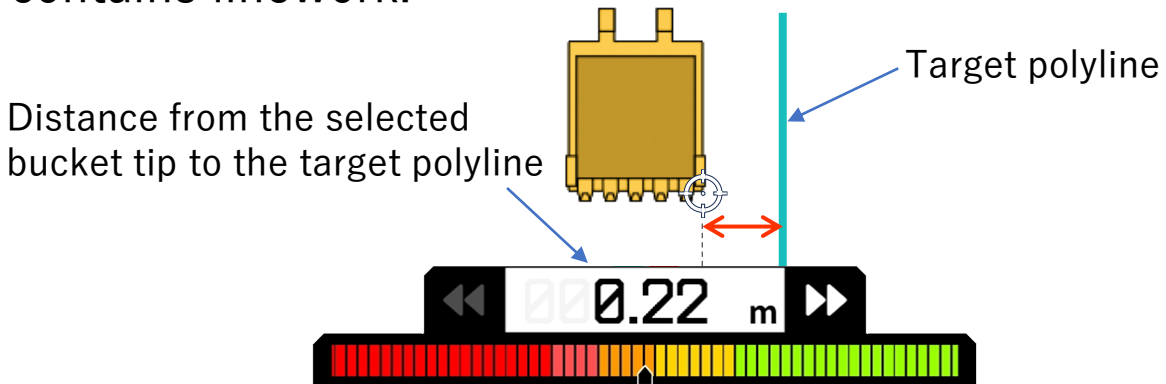


The offset direction depends on the relationship between the position of the bucket and the selected linework.

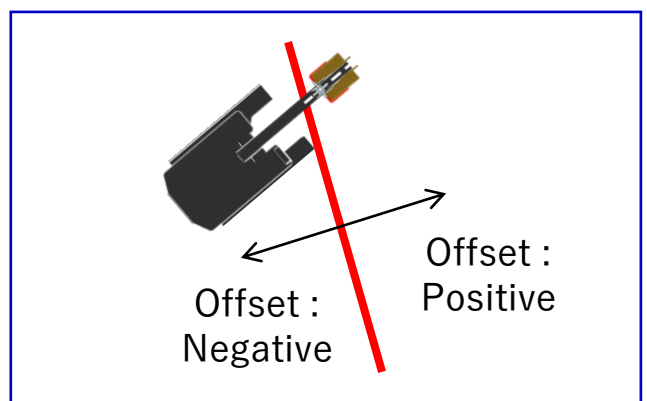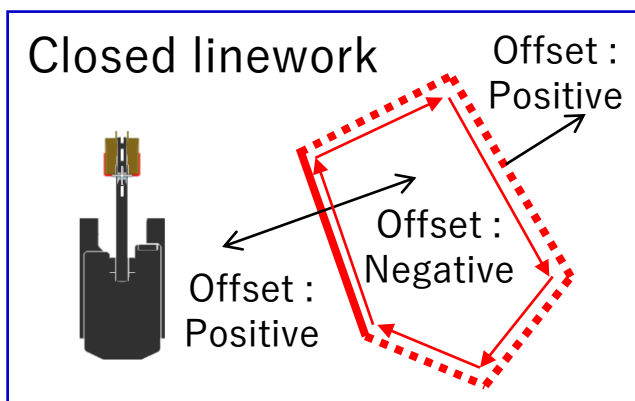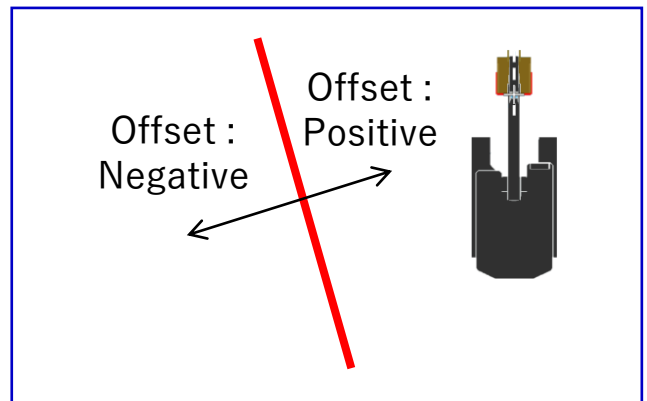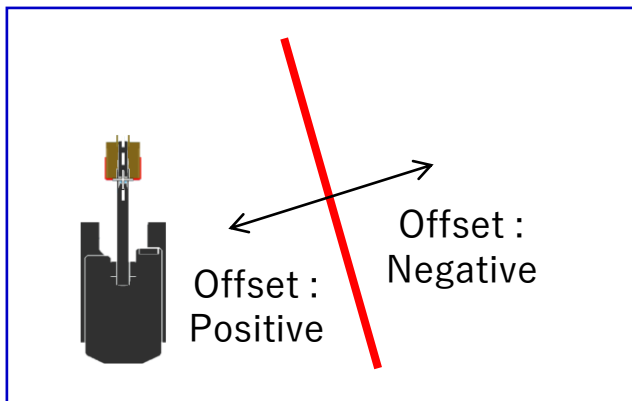

How to see the screen

This section explains how to view Steer Indicator displayed on the guidance screen.

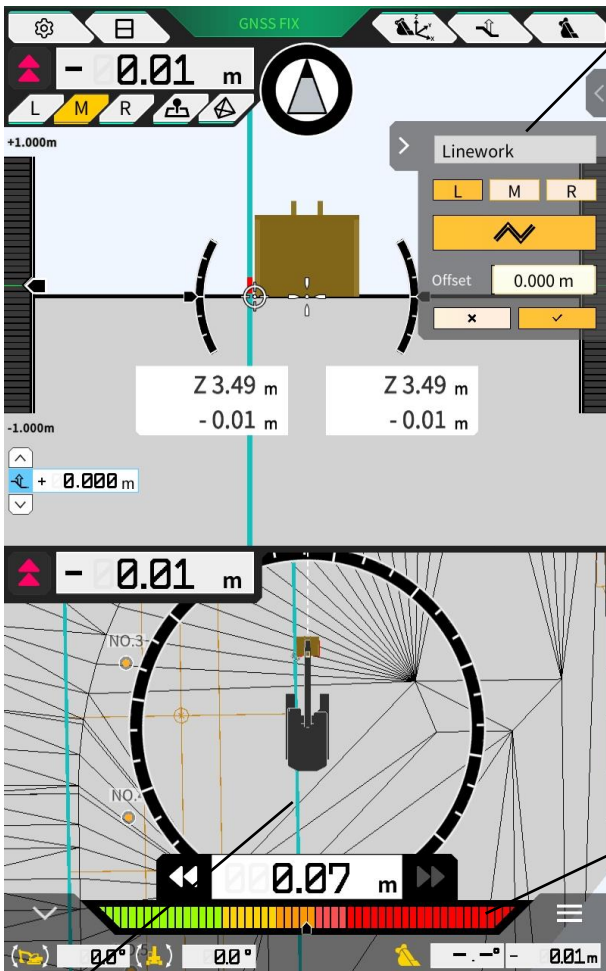

■ Side panel


○ Layer name

The layer name of the selected polyline is displayed

○ Cutting edge

Cutting edge position to show a distance to the selected polyline

○ Select polyline

When you tap , move to "Select Polyline" screen

○ Offset

The offset distance from the selected polyline

■ Steer Indicator

When you select a polyline and applied, this indicator will be shown

■ Selected/Offset line

"Selected Line" and "Offset Line" are displayed in Plan View and Section View

01

Chapter

Application Settings

1.1 Application settings


There is Steer Indicator settings in Application Settings.

Steer Indicator Mode

When you turn it OFF, “Side panel” in the guidance screen disappears. The default is ON.

Display Mode


In the case of 2 screen display, Steer Indicator display can be selected “Middle” or “Bottom”. The default is “Bottom”.

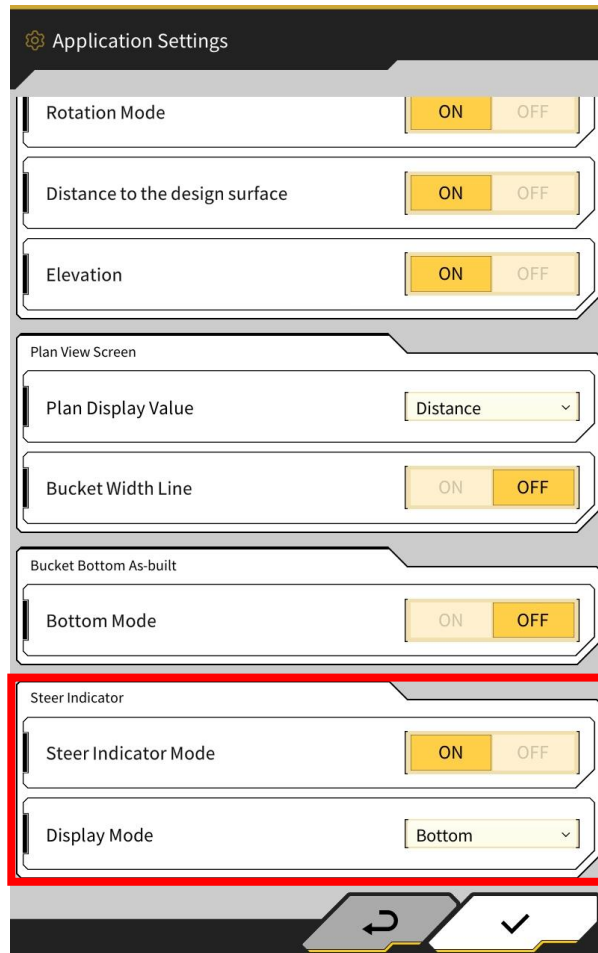

1.2 Steer Indicator and Sound Settings

The range, color, and sound of the Steer Indicator and line color can be changed.

1. Launch Machine Guidance Screen
2. ⚙️ Menu
3. Guidance Settings
4. Steer Indicator and Sound Settings

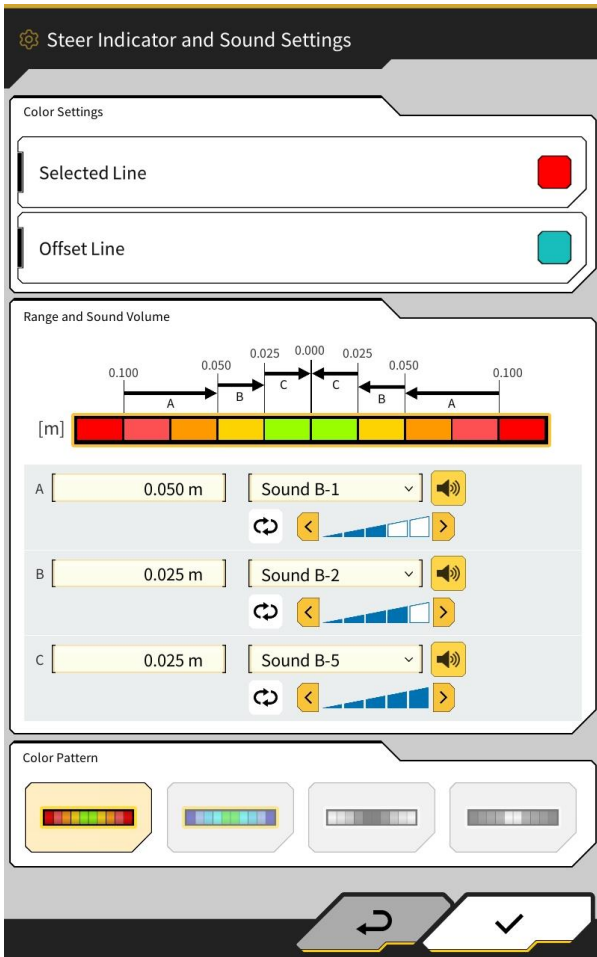

Selected Line

When you select a polyline, the line is highlighted as this color.

Offset Line

When you set offset, the offset line is displayed as this color.

Range and Sound Volume



The indicator range, color, sound and volume can be changed.


02

 
Chapter

How to use

2.1 Use Steer Indicator

1. Launch Machine Guidance Screen
2. Select a project file that contains linework
3. Tap “Side panel” for Steer Indicator
4. Select L/M/R for distance display with indicator
5. Tap  to select a polyline
→ See [2.2](#) for how to select a polyline
6. Set “Offset” value if necessary
7. Tap  to apply the settings and display Steer Indicator

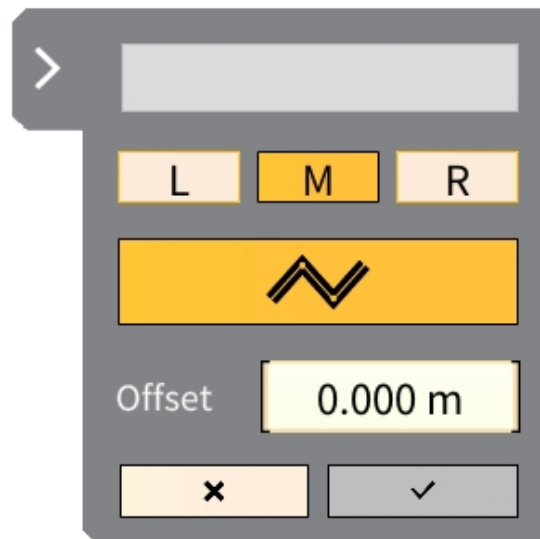


When  is tapped, Steer Indicator disappear from the guidance screen.

2.2 How to select a polyline

You can select a polyline on this screen by moving the cursor over the linework or by tapping “Select nearest” button.

Tap " Select nearest " to select the polyline closest to the selected cutting edge(L/M/R) of the bucket.

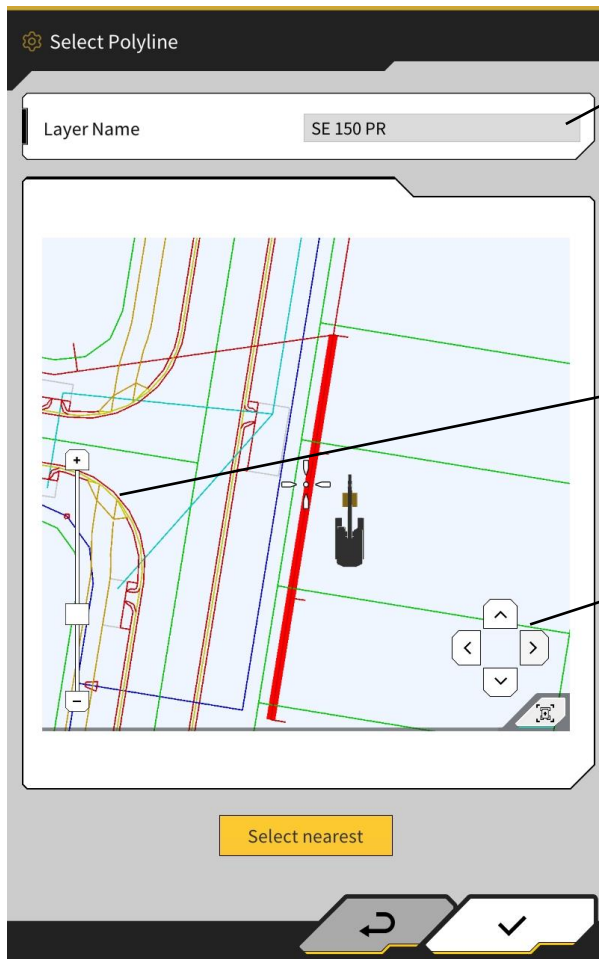

■ Layer Name

The layer name of the selected polyline is displayed

■ Zoom Slider

Change zoom level with adjuster

■ Cross-Keys

Move the cross-hairs by tapping the key

Contact information



Inquiries about products and defects:

EARTH BRAIN Co., Ltd.

Support site inquiries :

[Europe](#)

[US](#)

[Australia](#)

[Asia](#)